


Settings on the Shelly Homepage - Only for Shelly 2 / 2.5


Settings on the Shelly Homepage

Supplements specifically for Shelly 2 / 2.5

Only for [Shelly 2 / 2.5](#)

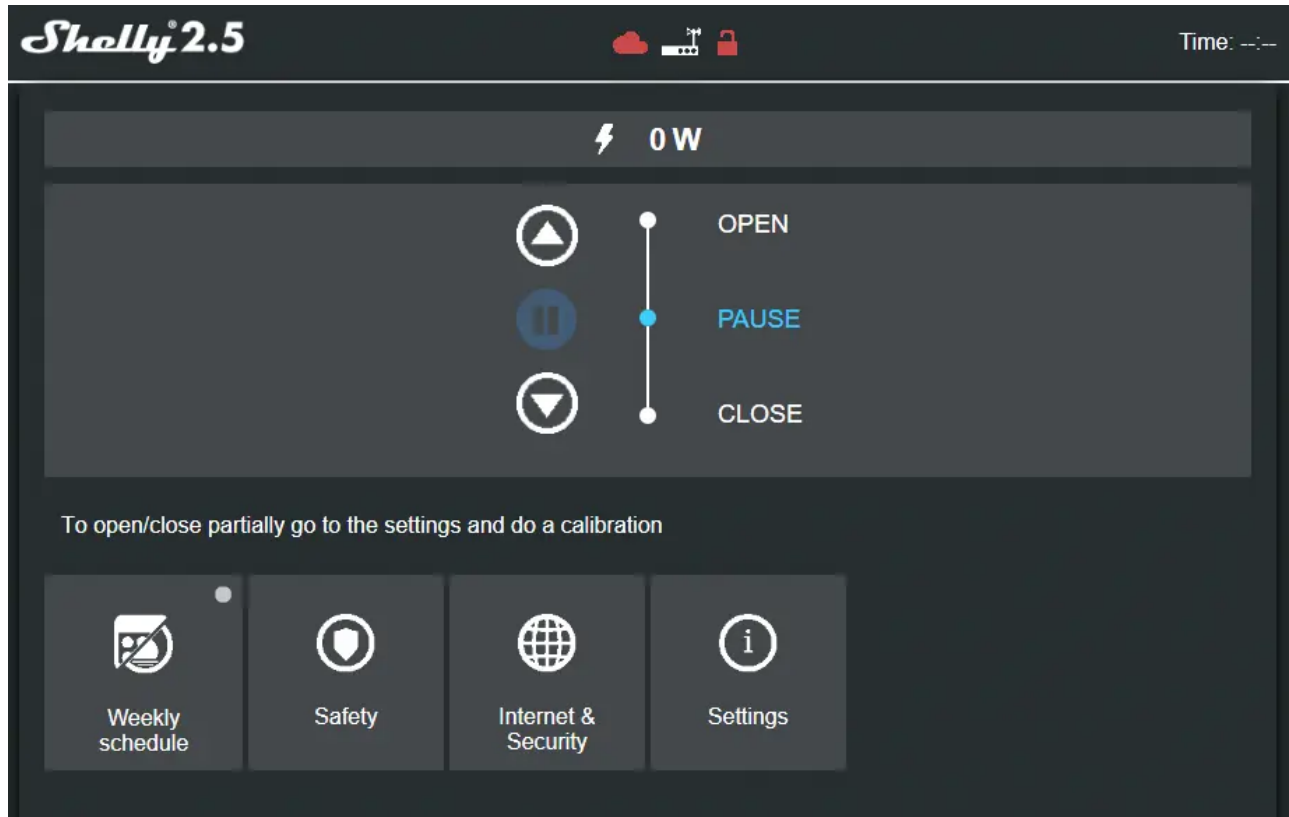

Safety

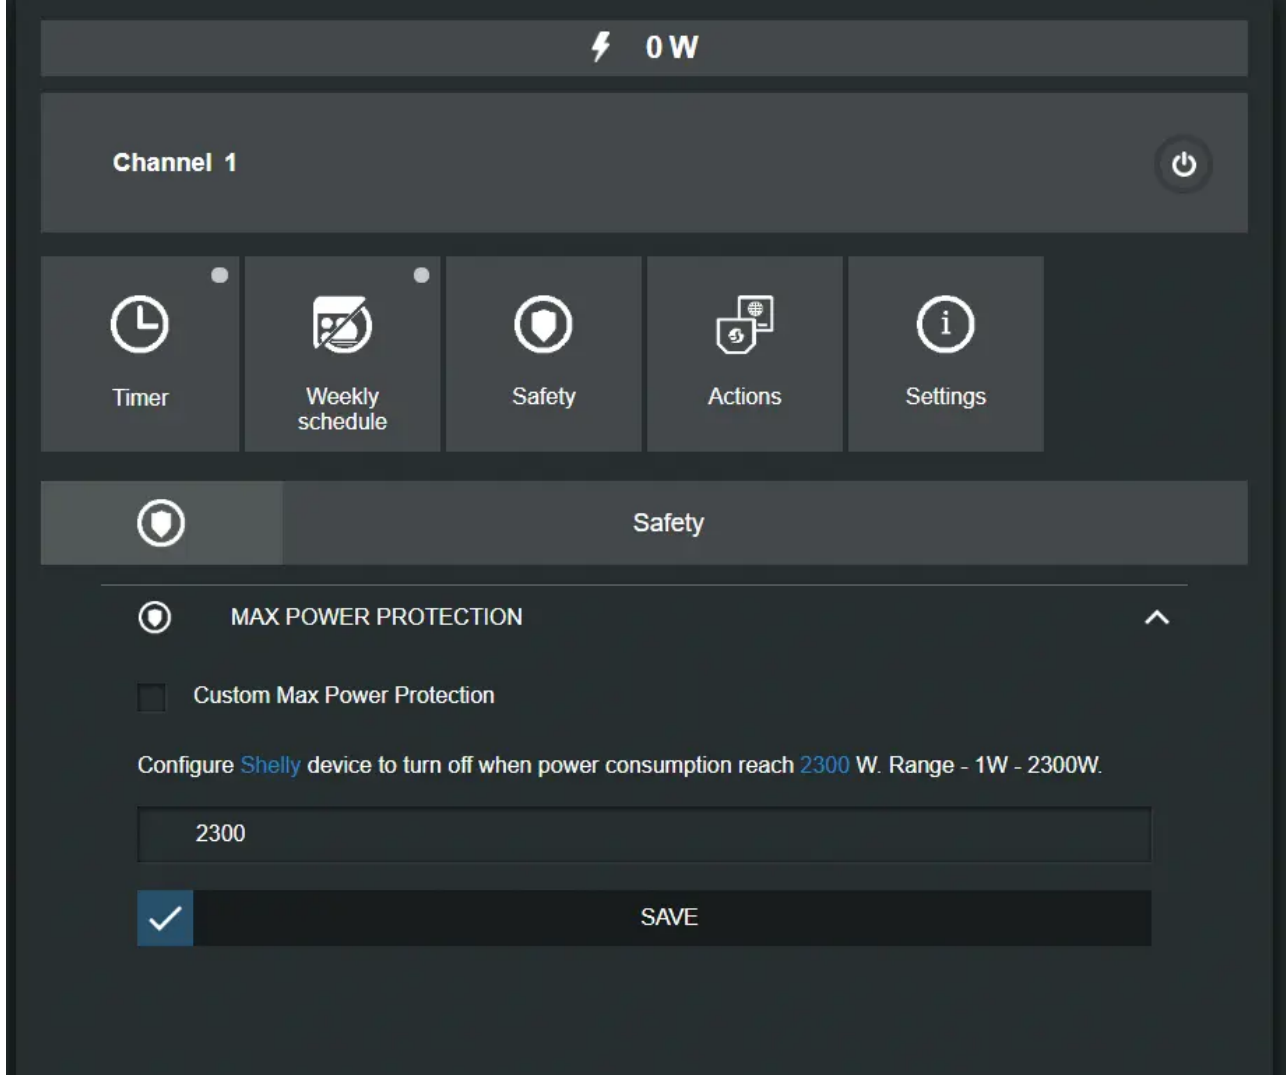

MAX POWER PROTECTION


Custom Max Power Protection - Der [Shelly 2.5](#) **schaltet** bei vordefiniertem maximalen Leistungswert **AUS**.
Bereich: 1-2300W.

Nach Eingabe des gewünschten Leistungswertes mit **SAVE** bestätigen.

in **Relay Mode**: **Safety and Actions** are not included in the main overview!



Settings only possible after selecting the channel (channel 1 or 2)! (see picture "Safety")

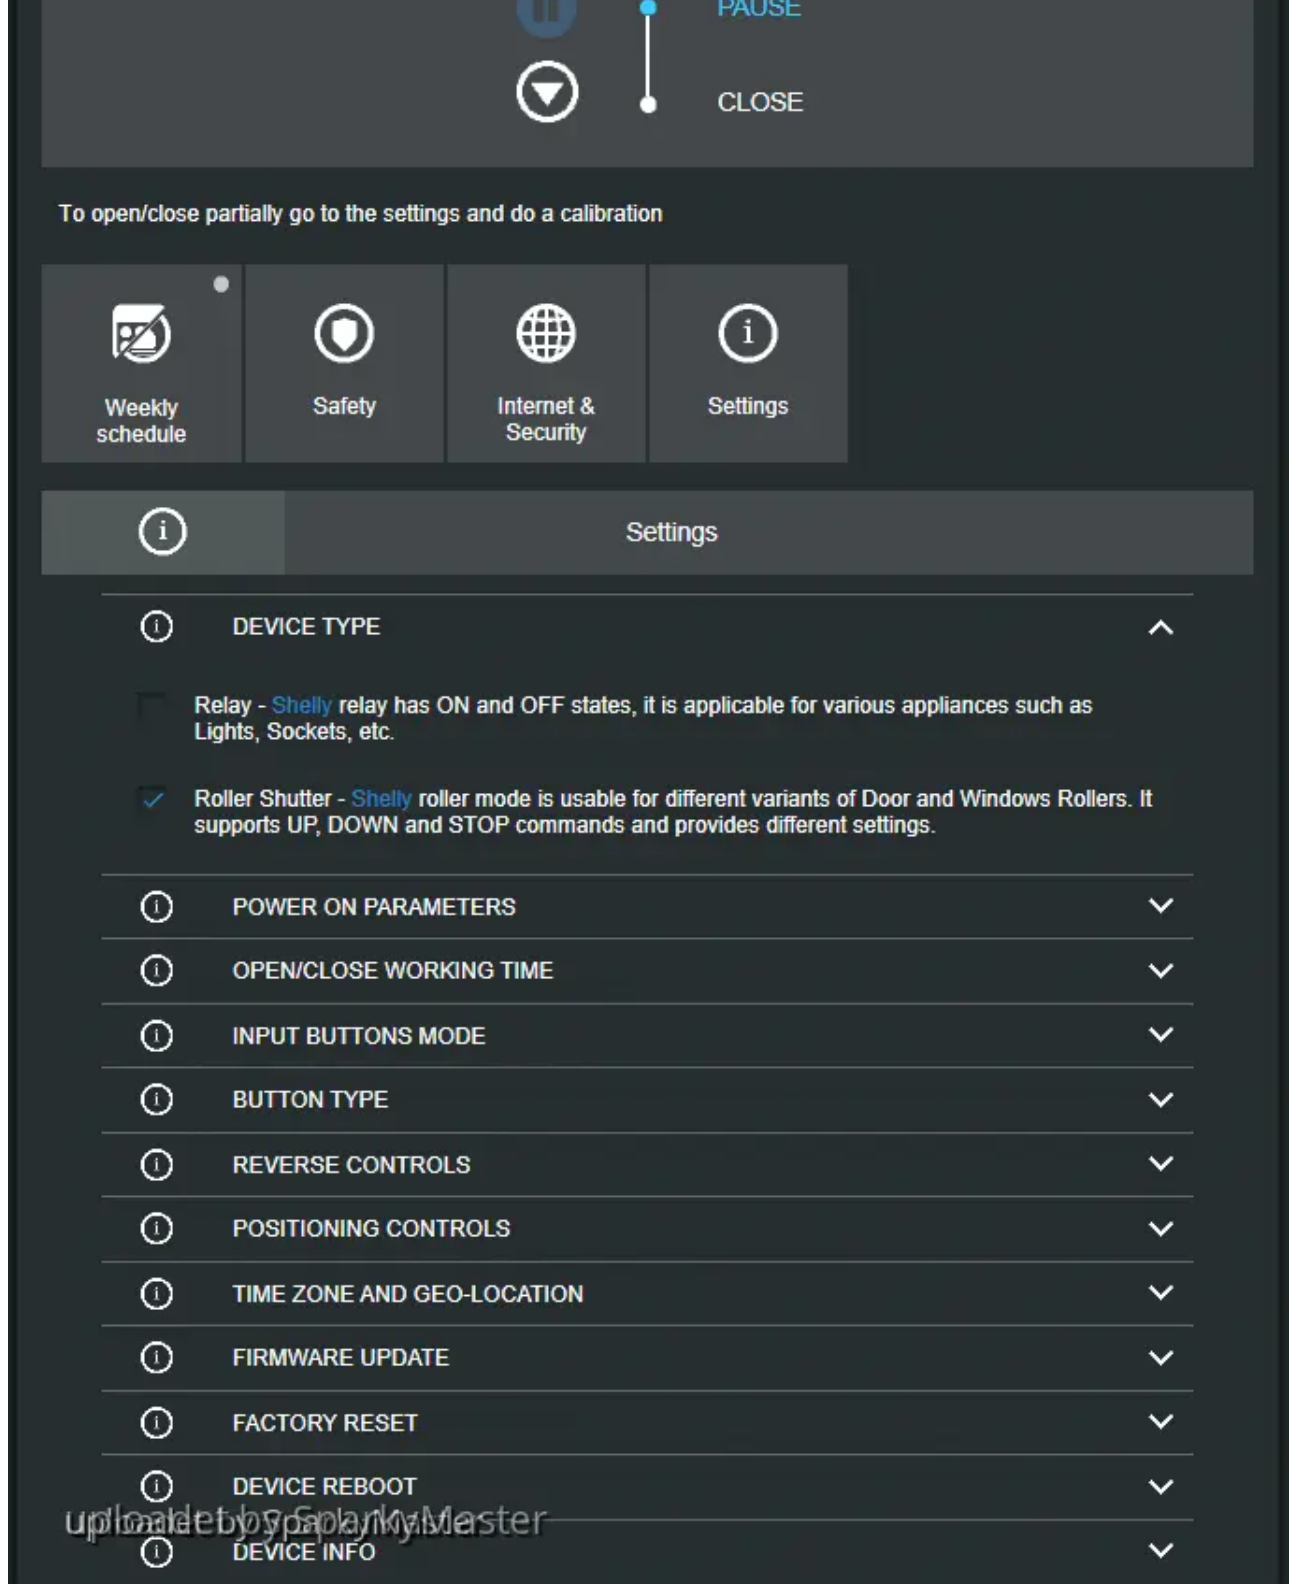Settings



DEVICE TYPE

Selection: Relay- or Roller Shutter mode

 DEVICE TYPE 

☐ Relay - **Shelly** relay has ON and OFF states, it is applicable for various appliances such as Lights, Sockets, etc.



☒ Roller Shutter - **Shelly** roller mode is usable for different variants of Door and Windows Rollers. It supports UP, DOWN and STOP commands and provides different settings.

Relay - Configure Shelly Device as a 2-circuit relay, two separately switchable relay outputs O1 / O2

Roller Shutter - Configure Shelly Device in Roller Shutter-Mode, software channel lock

POWER ON PARAMETERS

This sets the Devices' default state when powered from the power grid. As Initial Inclusion; after a power failure.

 POWER ON PARAMETERS 

☐ OPEN - Configure **Shelly** roller to OPEN when it has power.

☐ CLOSE - Configure **Shelly** roller to CLOSE when it has power.

☒ STOP - Configure **Shelly** roller to STOP when it has power.

OPEN / CLOSE WORKING TIME

Time setting in seconds for automatic STOP-function when opening / closing the shutter.

After typing the desired time, press **Save**.

INPUT BUTTON MODE

Selection of the button or switch mode

One button - each press changes the action (UP / STOP / DOWN / STOP / ...)

Open & Close Buttons - two separately buttons / switches each direction (UP / DOWN)

BUTTON TYPE

Selection of the button or switch type

BUTTON TYPE

☐

Momentary - Press Button 1 for OPEN and Button 2 for CLOSE.

☒

Toggle - Press Button 1 for OPEN and press again for STOP.
Press Button 2 for CLOSE and press again for STOP.

☐

Reverse switch

☐

Detached Switch - Set **Shelly** device to be in "Detached" switch mode - switch is separated from the relays.

Reverse switch - Reversing the switch UP / DOWN position.

Detached Switch - Detached mode is used when you don't want the physical switch that is wired to the Shelly to directly control the electrical consumer, but instead you'll use the "action" menu, or MQTT, API, ect. to control some sophisticated action.

You can also use detached mode to temporarily disable the physical switch.

REVERSE CONTROLS


REVERSE CONTROLS

☐

Check if you want to reverse the OPEN and CLOSE controls for the **Shelly** roller.

Reverse inputs - In the case of a hard-to-reach switch installation, this option can be activated.

POSITIONING CONTROLS

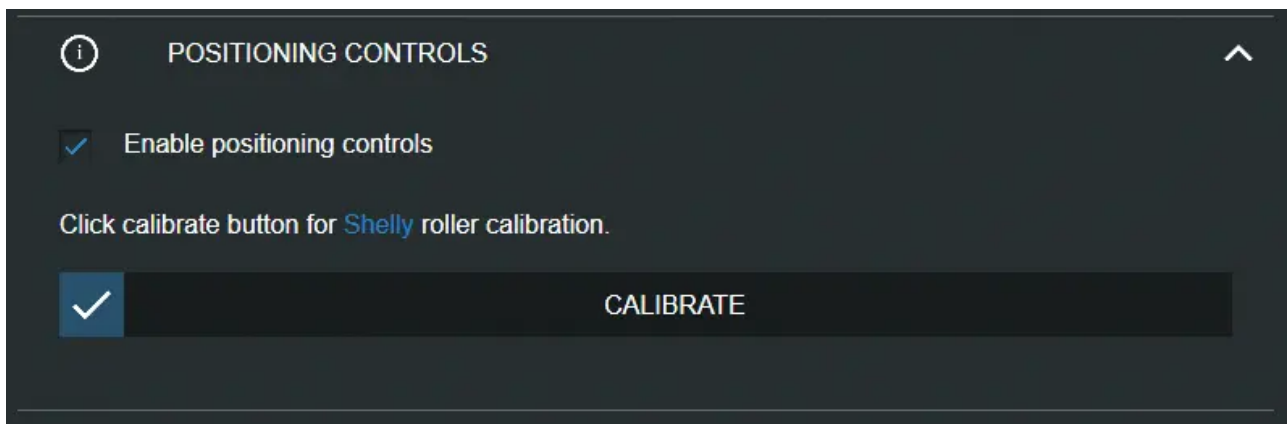

Enable positioning controls - Disable or Enable positioning controls

CALIBRATE - Start the Shutter Calibration

More information: [calibration Shelly 2 / 2.5 - Roller shutter - mode](https://shelly-forum.com/lexikon/entry/130-settings-on-the-shelly-homepage-only-for-shelly-2-2-5/)