

Error Codes

Error Codes

Error 2 means that there is not a power change during the calibration.

Error 4 means that there is a problem with the board and its voltage.

Error 1 means that there is not a change of the operating voltage when the device is wired without N.