

Pair Plus H&T as an external sensor with TRV

Short instructions to pair PlusH&T as an external sensor:


Setting plusH&T in WEB-UI (press reset button to wake him up 3min,)

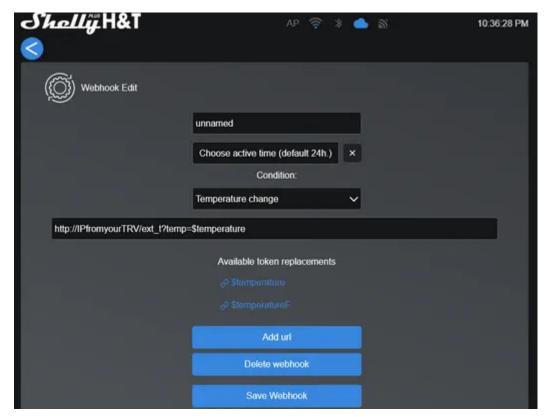


or in the App / home.shelly.cloud::

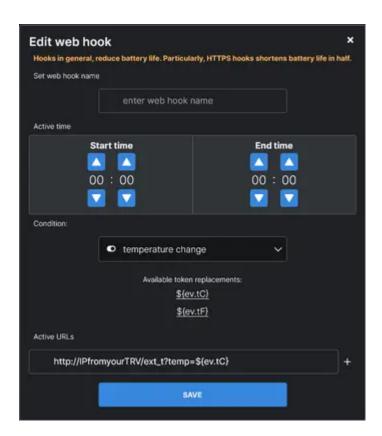


Settings in the TRV (App/home.shelly.cloud):

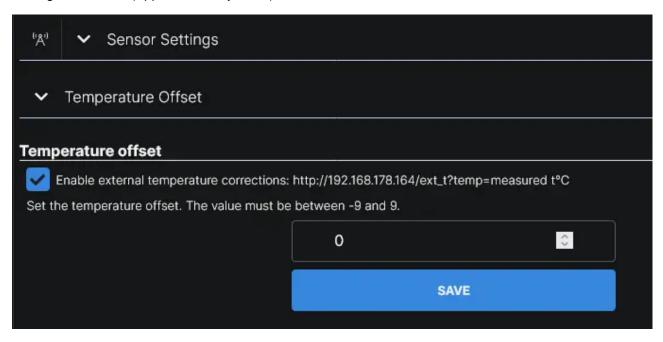


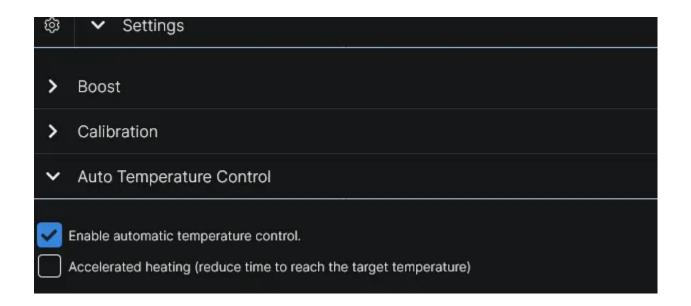


if PlusH&T should be exclusive external sensor (without correction factor with TRV internal temperature)

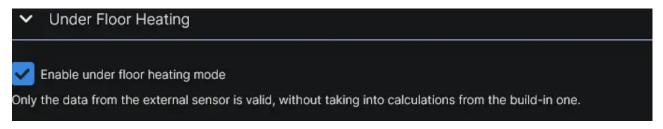


and in WEB-UI:

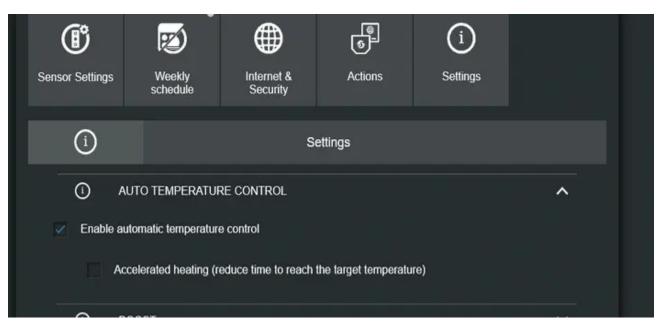

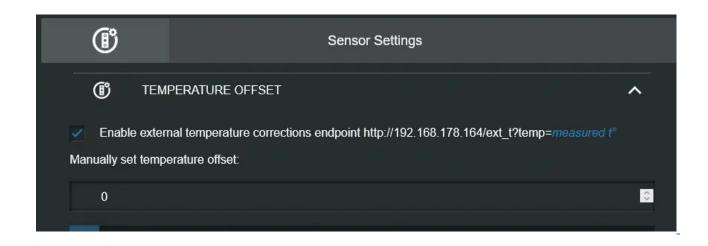

if PlusH&T should be exclusive external sensor (without correction factor with TRV internal temperature)

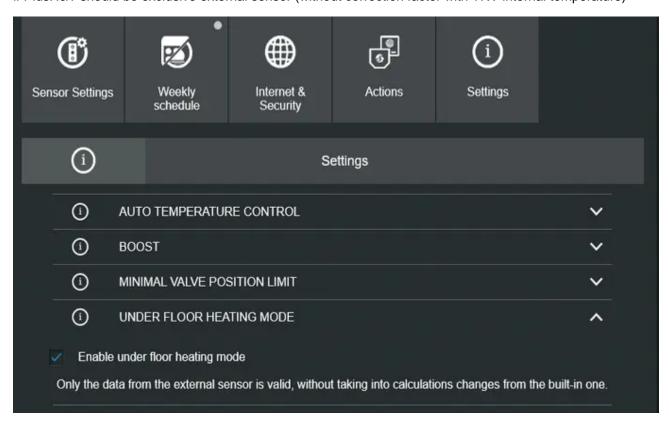

Addendum (as of September 27th, 2022) there is still a small error here if webhooks are generated via the app.

Go to WEB UI and und make sure the active time is set to default

Extragmorfaile: or type unknown