


## Setting - Menü

Settings Einstellungen für Schalter oder Taster für Relais 1+2 Settings Einstellungen für Schalter oder Taster für Relais 1+2 siehe Anhänge für Rolladen!

1

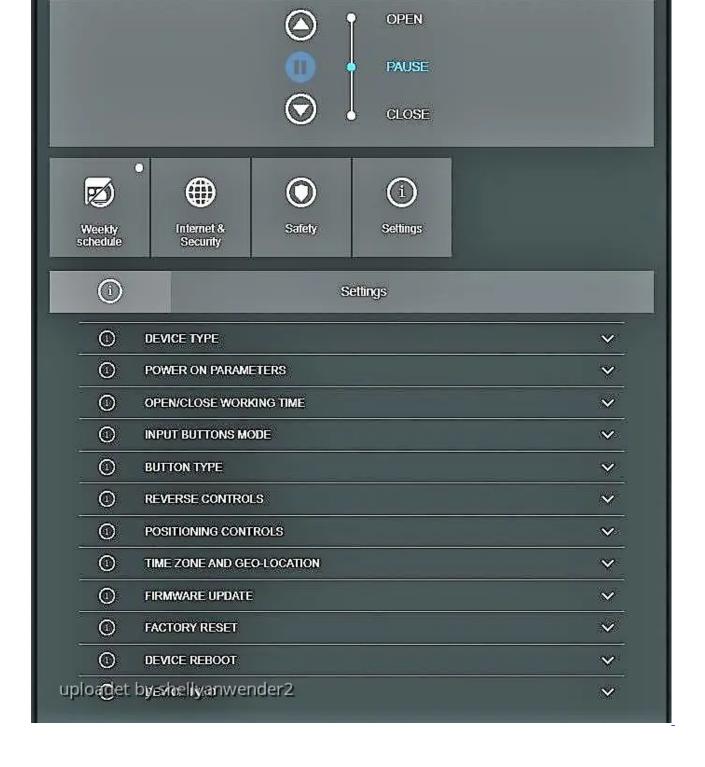

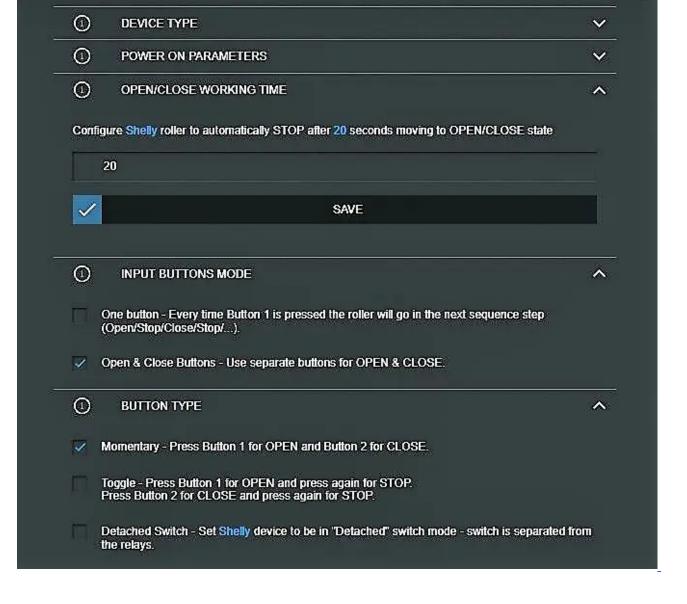

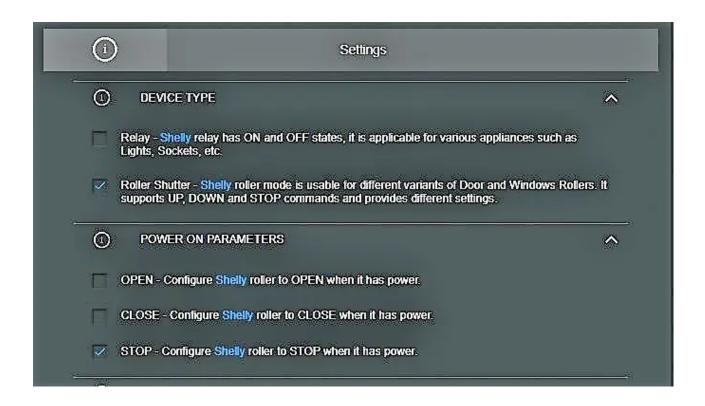

0	DEVICE TYPE	**
0	POWER ON PARAMETERS	٧
0	OPEN/CLOSE WORKING TIME	.4
①	INPUT BUTTONS MODE	**
0	BUTTON TYPE	A
V	Momentary - Press Button 1 for OPEN and Button 2 for CLOSE.	
	Toggle - Press Button 1 for OPEN and press again for STOP. Press Button 2 for CLOSE and press again for STOP.	
	Toggle - Press Button 1 for OPEN and press again for STOP. Press Button 2 for CLOSE and press again for STOP.  Detached Switch - Set Shelly device to be in "Detached" switch mode - switch is separathe relays.	ated from
	Press Button 2 for CLOSE and press again for STOP  Detached Switch - Set Shelly device to be in "Detached" switch mode - switch is separathe relays.	ated from
	Press Button 2 for CLOSE and press again for STOP  Detached Switch - Set Shelly device to be in "Detached" switch mode - switch is separathe relays.	ated from
	Press Button 2 for CLOSE and press again for STOP  Detached Switch - Set Shelly device to be in "Detached" switch mode - switch is separathe relays.  REVERSE CONTROLS	ated from

siehe Anhänge für Relais 1+2

