

## **Setting - Men??**

Settings Einstellungen f??r Schalter oder Taster f??r Relais 1+2

Settings Einstellungen für Schalter oder Taster für Relais 1+2

siehe Anhänge für Rolladen!



Weekly  
schedule



Internet &  
Security



Safety



Settings



Settings

① DEVICE TYPE



① POWER ON PARAMETERS



① OPEN/CLOSE WORKING TIME



① INPUT BUTTONS MODE



① BUTTON TYPE



① REVERSE CONTROLS



① POSITIONING CONTROLS



① TIME ZONE AND GEO-LOCATION



① FIRMWARE UPDATE



① FACTORY RESET



① DEVICE REBOOT



uploaded by  anwender2

|   |                         |   |
|---|-------------------------|---|
| ① | DEVICE TYPE             | ▼ |
| ① | POWER ON PARAMETERS     | ▼ |
| ① | OPEN/CLOSE WORKING TIME | ^ |

Configure Shelly roller to automatically STOP after 20 seconds moving to OPEN/CLOSE state

20

SAVE


|                                     |  |   |
|-------------------------------------|--|---|
| ①                                   | INPUT BUTTONS MODE   | ^ |
| <input type="checkbox"/>            | One button - Every time Button 1 is pressed the roller will go in the next sequence step (Open/Stop/Close/Stop/...). |   |
| <input checked="" type="checkbox"/> | Open & Close Buttons - Use separate buttons for OPEN & CLOSE.  |   |
| ①                                   | BUTTON TYPE  | ^ |
| <input checked="" type="checkbox"/> | Momentary - Press Button 1 for OPEN and Button 2 for CLOSE.  |   |
| <input type="checkbox"/>            | Toggle - Press Button 1 for OPEN and press again for STOP.<br>Press Button 2 for CLOSE and press again for STOP.     |   |
| <input type="checkbox"/>            | Detached Switch - Set Shelly device to be in "Detached" switch mode - switch is separated from the relays.           |   |

The screenshot shows a software interface titled "Settings" with a dark theme. At the top left is an "i" icon. The main content is organized into sections with arrows indicating expandable sections.

- DEVICE TYPE**
  - Relay - Shelly relay has ON and OFF states, it is applicable for various appliances such as Lights, Sockets, etc.
  - Roller Shutter - Shelly roller mode is usable for different variants of Door and Windows Rollers. It supports UP, DOWN and STOP commands and provides different settings.
- POWER ON PARAMETERS**
  - OPEN - Configure Shelly roller to OPEN when it has power.
  - CLOSE - Configure Shelly roller to CLOSE when it has power.
  - STOP - Configure Shelly roller to STOP when it has power.

- DEVICE TYPE ▼
- POWER ON PARAMETERS ▼
- OPEN/CLOSE WORKING TIME ▼
- INPUT BUTTONS MODE ▼
- BUTTON TYPE ^
  - Momentary - Press Button 1 for OPEN and Button 2 for CLOSE.
  - Toggle - Press Button 1 for OPEN and press again for STOP.  
Press Button 2 for CLOSE and press again for STOP.
  - Detached Switch - Set **Shelly** device to be in 'Detached' switch mode - switch is separated from the relays.
- REVERSE CONTROLS ^
  - Check if you want to reverse the OPEN and CLOSE controls for the **Shelly** roller.
- POSITIONING CONTROLS ^
  - Enable positioning controls

siehe Anhänge für Relais 1+2

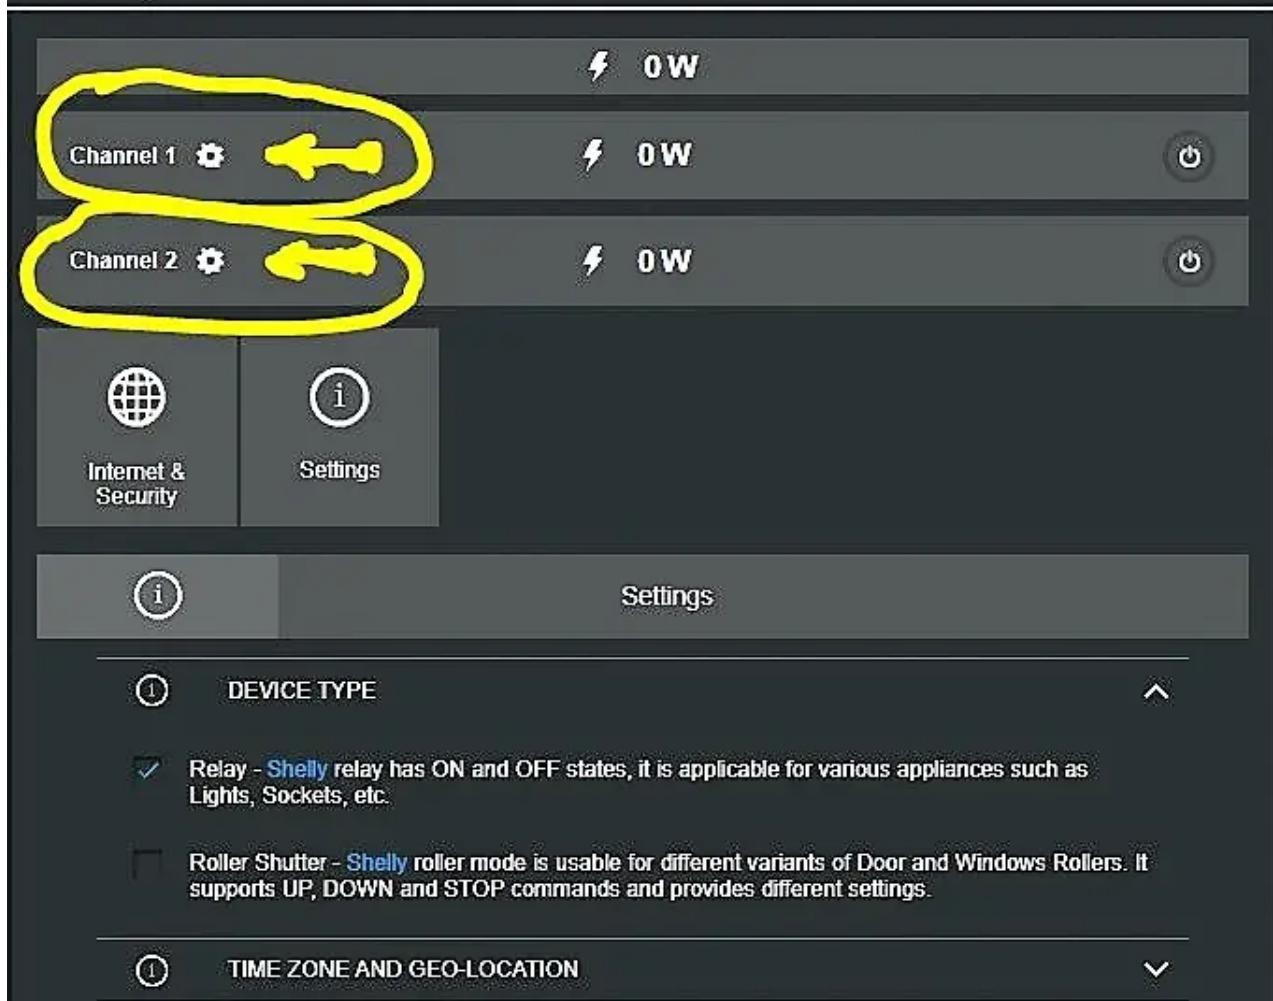



Timer



Weekly schedule



Safety



Settings



Settings



POWER ON DEFAULT MODE

- ON - Configure **Shelly** device to Turn ON, when it has power.
- OFF - Configure **Shelly** device to Turn OFF, when it has power.
- Restore Last Mode - Configure **Shelly** device to Restore the last mode it was in, when it has power.
- SWITCH - Operates the **Shelly** Operates the Shelly device according to the state of the switch or button connected to the device.



BUTTON TYPE

- Momentary - Set **Shelly** device to be "Momentary" switch. Push-for "ON" or Push-for "OFF".
- Toggle Switch - Set **Shelly** device to be "Toggle" switch. Act as a flip switch with one state for "ON" and one state for "OFF".
  - Reverse switch
- Edge Switch - Set **Shelly** device to be "Edge" switch. Changes state on every hit.
- Detached Switch - Set **Shelly** device to be in "Detached" switch mode - switch is separated from the relays.

uploaded by shellyanwender2

Action Switch: Used for motion sensor. Any input turns "ON" and resets Auto OFF timer.



Timer



Weekly schedule



Safety



Settings



## Settings

## ① POWER ON DEFAULT MODE

- ON - Configure **Shelly** device to Turn ON, when it has power.
- OFF - Configure **Shelly** device to Turn OFF, when it has power.
- Restore Last Mode - Configure **Shelly** device to Restore the last mode it was in, when it has power.
- SWITCH - Operates the **Shelly** Operates the Shelly device according to the state of the switch or button connected to the device.

## ① BUTTON TYPE

- Momentary - Set **Shelly** device to be "Momentary" switch. Push-for "ON" or Push-for "OFF".
- Toggle Switch - Set **Shelly** device to be "Toggle" switch. Act as a flip switch with one state for "ON" and one state for "OFF".
  - Reverse switch
- Edge Switch - Set **Shelly** device to be "Edge" switch. Changes state on every hit.
- Detached Switch - Set **Shelly** device to be in 'Detached' switch mode - switch is separated from the relays.

uploaded by shellyanwender2

Activation Switch - use it for motion sensor. Any input turns "ON" and resets Auto OFF timer.