

NTP-Server Setting

How to set another NTP server in Shelly

Setting a different or own time server is possible with firmware 1.5.0 .

The setting can not (yet) be found in the app, but **only in the WEB UI** (calling the IP in the browser).

Under "**Internet & Security**" you will find the submenu "**SNTP-SERVER**".

There you can enter the IP address of the desired time server in the **format xxx.xxx.xxx.xxx** and save it with the button "**SAVE**".

The change is accepted after a reboot of the device.

In firmware 1.5.0, the setting only works if Internet access is not generally blocked for the Shelly device!