

The screenshot shows the 'Settings' menu of a Shelly device. At the top, there are four icons: 'Weekly schedule' (calendar), 'Internet & Security' (globe), 'Safety' (shield), and 'Settings' (info icon). The 'Settings' icon is highlighted. Below the header, the 'Settings' tab is selected. The main content area is titled 'BUTTON TYPE'. It contains several configuration options:

- DEVICE TYPE**: A dropdown menu with three options: "Momentary - Press Button 1 for OPEN and Button 2 for CLOSE.", "Toggle - Press Button 1 for OPEN and press again for STOP. Press Button 2 for CLOSE and press again for STOP.", and "Reverse switch". The "Toggle" option is currently selected.
- SWAP INPUTS**: A checkbox labeled "Check if you want to swap the buttons for the Shelly device." This checkbox is checked.
- REVERSE CONTROLS**: A checkbox labeled "Check if you want to reverse the OPEN and CLOSE controls for the Shelly roller." This checkbox is unchecked.


At the bottom of the screen, there is a watermark that reads "uploaded by SparkyMaster" and a link "POSTING CONTROLS".

## SETTINGS:

### BUTTON TYPE:

- Haken bei *Reverse switch* setzen
- ggf. *REVERSE CONTROLS* aktivieren


Hier muss natürlich individuell probiert und getestet werden! Nicht jede Installation ist identisch bzw. vergleichbar.

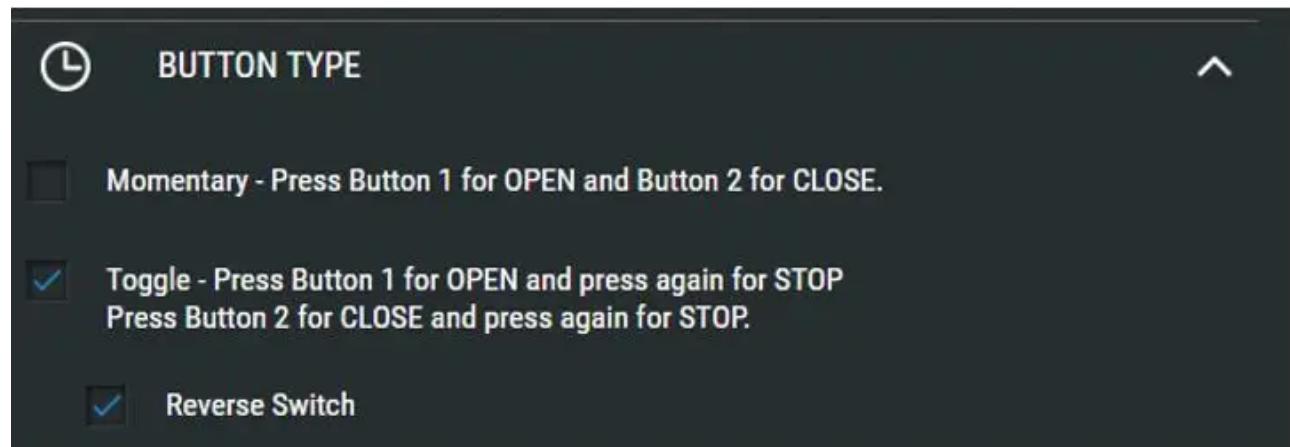

Diese Option regelt die Tastenlogik.

Normalerweise ist das Relais eingeschaltet, wenn die Taste gedrückt wird.

Wenn Sie "**Reverse Switch**" aktivieren, wird das Relais eingeschaltet, wenn Sie die Taste drücken und *loslassen*.

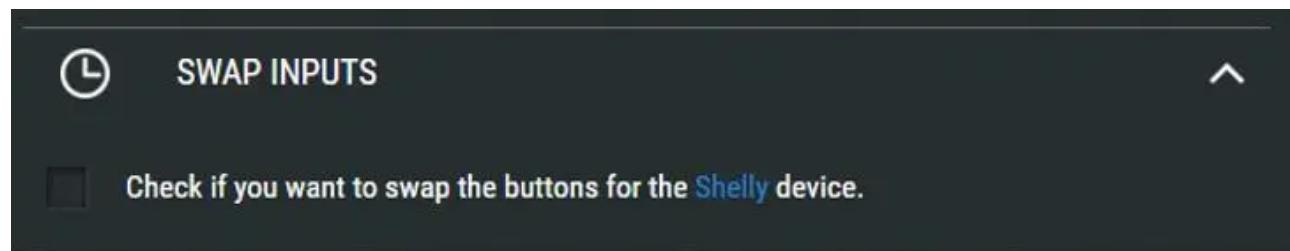

Wenn Sie die Tastenzuordnung für "**HOCH/ÖFFNEN**" und "**RUNTER/SCHLIESSEN**" ändern möchten, aktivieren Sie "**SWAP INPUTS**".

Vor Firmware 1.5.0 hatte der Shelly2.5 einen Fehler/Bug, möglicherweise muss diese Option aktiviert werden, damit die vorherige Zuordnung beibehalten werden kann.



## REVERSE CONTROLS



Check if you want to reverse the OPEN and CLOSE controls for the **Shelly** roller.

Diese Option kehrt lediglich die Ausgänge um.

Falls z.B. der Rollladen "HOCH" fährt obwohl "RUNTER" im WebUI oder in der APP gedrückt wurde, müssen Sie "**REVERSE CONTROLS**" aktivieren.